

Celebrity
British Craftsmanship

Made in
the UK

with our
5 YEARS
GUARANTEE

Massage Recliner In Motion

User Guide



Thank you for choosing a Celebrity Massage System

Please spend a few minutes reading the following instructions. Understanding how the system works will help you gain maximum benefit from it. These instructions should be read alongside our Operating and Care Instructions, which are attached to your chair.

Helpful Information

First Use

We recommend that the unit be used only for a few minutes initially, to allow your body to get used to the massage sensation. Gradually increase the length of time you use the massage function, over the first few periods of use. Should you experience any adverse reactions, stop using immediately and consult your medical practitioner.

Personal Use Only

The unit is designed and guaranteed for personal, home use only. Do not use for any commercial purpose, as this will invalidate the guarantee.

General Information

NOISE: As with any motorised system which uses vibration to activate the motion, there will be an amount of noise and vibration. This is particularly prevalent around the upper back area, where the ears are more sensitive to any noise and vibration from the motors situated in the back of the chair. Additionally, noise may be emitted from the footrest, when no leg pressure is applied and the footrest is in the closed position. This is due to the fact that for safety reasons (to reduce the risk of possible damage from entrapment between footrest and chair) the reclining mechanism situated under the chair, features a sprung-loaded footrest. The springs in the footrest may transmit a vibration noise, until the weight

of the legs reduces the amount of vibration transmitted to the springs. Further vibration may be caused by some of the metal action mechanism parts vibrating against each other and causing a noise.

IMPORTANT


This unit is designed for relaxation only and should not be used to treat any medical conditions.

If you have a medical condition, are under the care of a healthcare professional, or have a medical device fitted (such as a pacemaker), you must consult a qualified medical practitioner before using the massage system.

- Do not massage any part of the body that is painful, swollen, inflamed or covered with skin irritation.
- Do not use during pregnancy.
- This chair is not suitable for use by Children.
- Never attempt to repair/interfere with this appliance or any part of the mechanism. Contact your Celebrity retailer for any service issues.

Assembly and connections

Your chair is supplied with the base and the back as separate units. To assemble the chair hold the back and fabric flap with both hands. Line up the male and female brackets on the base and back. Apply downward force to the back and the connectors will fit into one another.

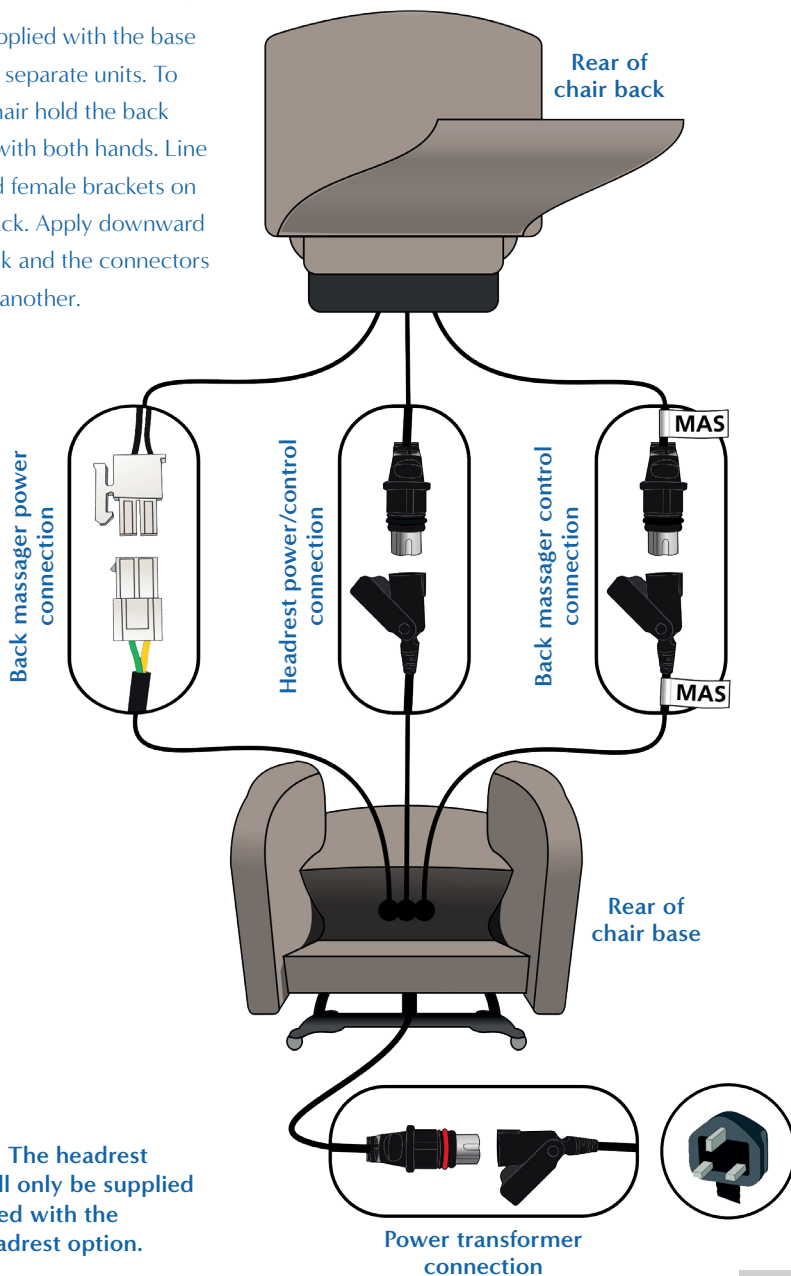

Your Chair Explained

The picture below shows all 5-massage zones, plus the heat pad that is contained in your massage chair.

The section on pages 6 and 7 explains how your handset will give you the best results from your massage system.



Please note that anyone with a medical device (e.g. pacemaker) or medical condition must consult with their doctor/healthcare professional before purchasing a massage system.

Your Massage Handset Explained

To get the best results from your Massage System, it is essential that you first understand the functions of the handset. Please take a little time to fully acquaint yourself with these functions and then adjust the speed and intensity of the massage, to suit your own requirements.

1. Power

 
This button switches the massage system on or off. Press the button to switch on (please note that the handset buttons will illuminate and the display will confirm that the massage system is active). To switch off, press the button again.

The massage system is programmed to allow 15 minutes of continual use, before automatically switching itself off.

Please note, when left inactive, the LCD illumination will switch off after 30 seconds, but will leave the functional buttons selected illuminated, until the system automatically switches itself off after 15 minutes.

When the massage system is switched off, the handset retains the last settings in its memory. When switched back on, the massage will automatically start with the last used settings.

Please note: the power button is designed to illuminate at all times (even when the rest of the handset is not illuminated) to show that the massage system has been successfully connected to the power supply.

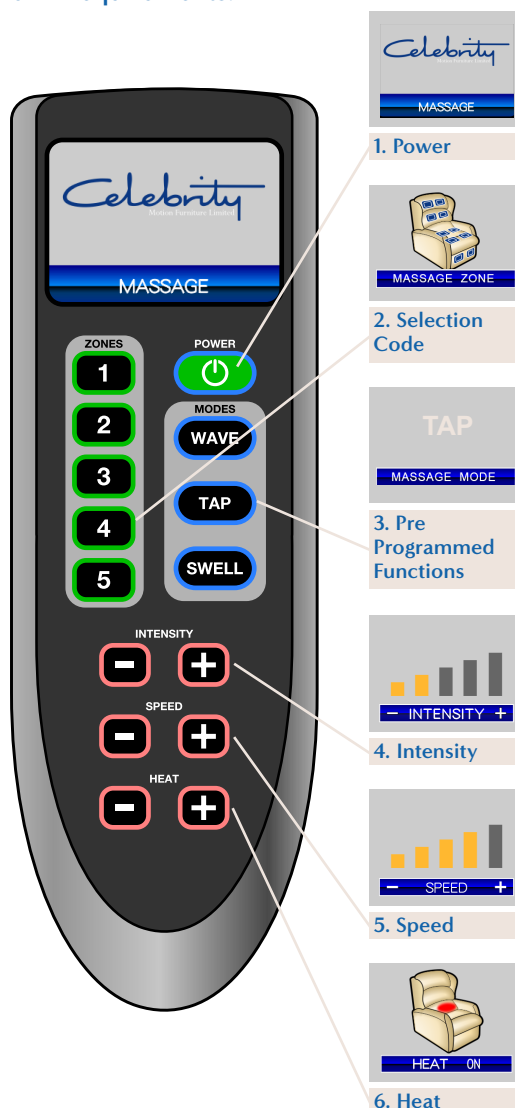

Zone Selection Control

Please follow the steps below to get the best results from your massage system.



2. Zone Selection Control

To choose the zones you wish to operate, simply press the appropriate zone selection buttons from 1 to 5.

Each button offers individual control of the selected zone, from top of the back (1) to the calves (5). As each button is selected, the zone button will glow and the display will confirm active zones. (Blue zones on LCD indicate active zone).

3. Pre-Programmed Functions

Your massage system is equipped with 3 pre-programmed functions for your enjoyment:


Wave: Offers complete head to toe massage by operating each selected zone in turn, starting at the top back (zone 1) and working through to the calves (5).

This programme can be operated at any level of intensity and at any speed (see sections 4 & 5). You can select /de-select any zone by pressing the zone button (see section 2). Pressing the Wave button will return the system to the Manual zone select option.

Tap: On activation all selected zones are operated together in short bursts. Tap can be used on any combination of zones, or on all 5 zones at once. This programme can also be adjusted to operate at any level of intensity and at any speed (see sections 4 & 5).


You can also select /de-select any zone by pressing the zone button (see section 2). Pressing the Tap button will return the system to the Manual zone select option.

Swell: This function offers a rolling massage to each zone sequentially, vibrating from minimum to maximum selected intensity. Swell can be used on any combination of zones, or on all 5 zones at once. Swell can also be adjusted to operate at any level of intensity and at any speed (see sections 4 & 5). You can also select /de-select a zone by pressing the zone button (see section 2). Pressing the Swell button will return the system to the Manual zone select option.

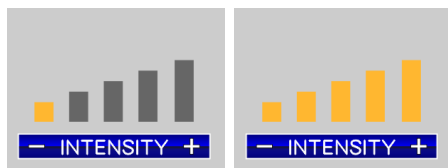

4. Intensity


The system offers varying levels of intensity, from a gentle massage, at the lowest level, to a more vigorous effect at maximum intensity. Press the intensity + or – button to increase or decrease the intensity. The LCD display will confirm the intensity level selected.

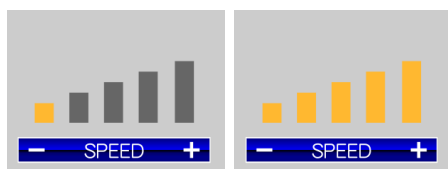

5. Speed

The speed selector only works when the Wave, Tap or Swell pre-programmed functions are selected. The speed selection offers varying speeds from slow to fast. Press

the intensity + or – button to increase or decrease the intensity. The LCD display will confirm the intensity level selected.

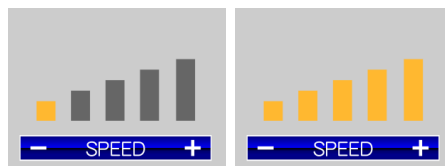

6. Heat - & +

The Heat buttons operate differently to the Intensity & Speed buttons in that they only switch the Heat Pad on (+) or off (-). You cannot increase or decrease the operating temperature of the heat pad with these buttons.

Once activated a red heat symbol appears in the LCD. This will extinguish along with the LCD display after 15 seconds but the heat pad will remain fully operational.

The heat pad is fitted with a pre-set thermostat, which, once the pad attains its operating temperature, cycles on and off to maintain the pre-set level of heat. The pad automatically switches off after 15 minutes use.

Service

Never attempt to repair or service this unit yourself. Should you have any service requirements, always contact your supplying retailer, in the first instance.

Guarantee

Your Massage System is fully guaranteed for 12 months from the date of purchase, providing that it has been used in accordance

with our Operating Instructions. This guarantee covers any failure of the system due to manufacturing defects within this period, providing the chair has been used for domestic use only. Any use of the chair for commercial purposes invalidates the guarantee. Please note that this guarantee does not cover any instances of misuse or damage to the chair.



This Massage Recliner User Guide should be read in conjunction with Celebrity's recliner Operating and Care Instructions booklet and should be kept for future reference.

Celebrity
British Craftsmanship

Celebrity Motion Furniture Limited, Common Road, Huthwaite, Notts. NG17 2JY.

Tel No: 01623 440 626 info@celebrity-furniture.co.uk